



Quick Guide

■ Button description

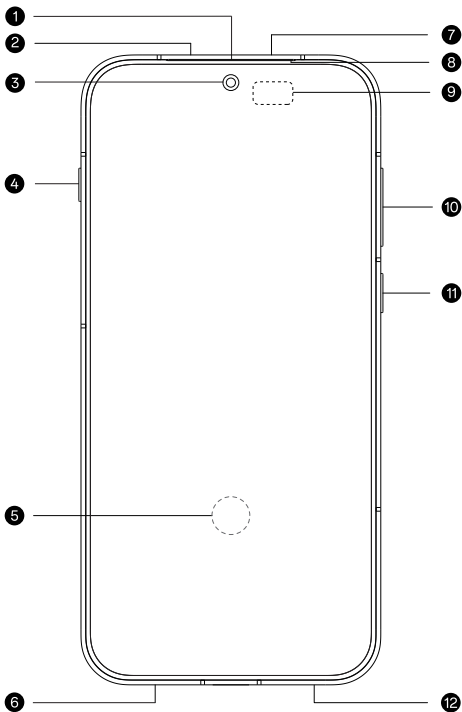

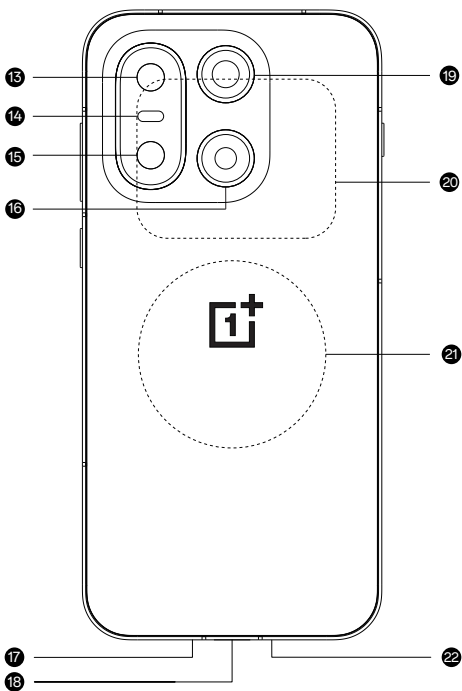

1 EN: Earpiece Speaker
FR: Haut-parleur supérieur

2 EN: Top Speaker
FR: Haut-parleur

3 EN: Front Camera
FR: Caméra avant

4 EN: Plus Key
FR: Touche Plus

5 EN: Ultrasonic fingerprint sensor
FR: Capteur d'empreintes
digitales à ultrasons

6 EN: SIM Slot
FR: Emplacement
carte SIM

7 EN: Air Pressure
Equalizing Hole
FR: Orifice d'équilibrage de
la pression d'air

8 EN: MIC
FR: Micro

9 EN: Ambient light/
proximity sensor
FR: Capteur de lumière
ambiante/de proximité

10 EN: Volume
FR: Volume

11 EN: Power Button
FR: Bouton d'alimentation

12 EN: Bottom Speaker
FR: Haut-parleur inférieur

13 EN: Wide angle camera
FR: Appareil photo grand angle

14 EN: Laser Focus & Infrared Sensor
FR: Focalisation laser et capteur infrarouge

15 EN: Telephoto Camera
FR: Téléobjectif

16 EN: Flashlight
FR: Lampe torche

17 EN: MIC
FR: Micro

18 EN: USB Type-C port
FR: Port USB type C

19 EN: Ultra-wide-angle Camera
FR: Caméra ultra grand angle

20 EN: NFC
FR: NFC

21 EN: Wireless charging
FR: Recharge sans fil

22 EN: MIC
FR: Micro

■ Learn More

For more information, please download the complete guide on

<https://service.oneplus.com/global/user-manual>.

This manual is for reference only, the actual product shall prevail.

The information is subject to change without notice.

This manual is published by OnePlus. OnePlus may correct any misprints, errors, and inaccuracies in the manual or improve its apps and/or devices at any time it deems necessary without any notice. Such changes will be applied in the later versions of this manual. All images in this manual are for reference only and may differ from the actual device and UI.