 


4K anti-shake camera

C200PRO

SJCAM
EMPOWER YOUR DREAMS

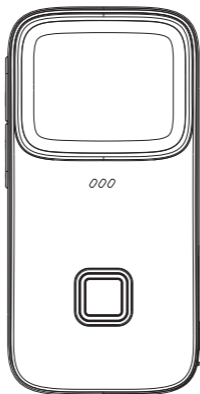

Please read this manual carefully and store it for future reference



User Guide

Please read this user guide carefully before using the camera for the first time.

 
Safety guidelines

1. Do not place this product near objects with strong magnetic fields, such as motors, magnets, etc. Also avoid placing the device near objects that emit strong radio waves.
2. Please choose a standard and reliable brand of MicroSD card.
3. Do not place the MicroSD card near magnetic objects to avoid data loss.
4. If the product overheats, emits smoke or weird smells, remove the device from its charger immediately to avoid fire.
5. When charging, keep the device out of children's and pets' reach.
6. Keep the product in a cool, dry and dust-free place. Do not expose it to high temperatures or direct sunlight.
7. Avoid dropping and colliding the device.
8. Recycle responsibly when scrapping the device or its battery. They cannot be recycled with normal household waste.
9. Do not disassemble.

If you have any questions, please contact the manufacturer or your retailer.



Product Description

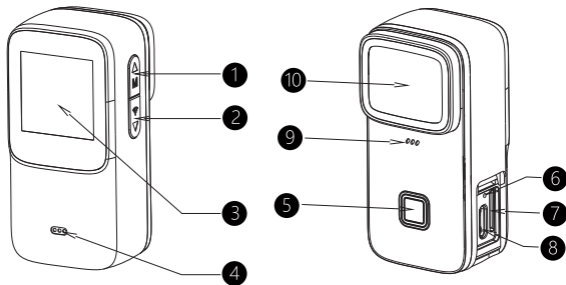

1. Up / M
2. Down / WiFi
3. Screen
4. Speaker
5. On / Off / OK

6. Reset
7. MicroSD slot
8. Type-C port
9. Microphone
10. Lens

 
Packing List



Camera ×1



Waterproof Case ×1




Base Mount ×1



Frame Mount ×1



 Back Clip ×1



3M Sticker ×2



Helmet Base ×2



USB Cable ×1



Wiping Cloth ×1



User Manual ×1

Specifications

Screen:	1.3" HD touch screen
Lens Angle:	135°
Battery:	1200mAh non-removable battery
WiFi:	2.4GHz/5GHz
Encoding format:	H.264/H.265
Light Frequency:	50Hz/60Hz
Video format:	MP4
Image format:	JPG
Video Resolution:	4K (3840*2160) 30fps 2K (2560*1440) 60/30fps 1080P (1920*1080) 120/60/30fps 720P(1280*720)120/60/30fps
Image Resolution:	20M(5888*3312) 16M(5376*3024) 14M(5008*2816) 12M(4640*2608) 10M(4320*2432) 8M(3840*2160)
USB interface:	TYPE-C
Body waterproof:	5 meters
Waterproof with waterproof case:	30 meters
Power input:	5V2A
Storage:	micro SD card, maximum support 128G
Operating temperature:	-10°C~45°C
Product Size:	68*34*26.5mm
Supported languages:	English / French / German / Spanish / Italian / Portuguese / Chinese / Japanese / Traditional Chinese / Russian / Romanian / Polish / Czech / Slovak / Hungarian / Finnish / Danish / Dutch / Turkish / Hebrew

 
Remote control instructions



- 1.Power button: Turn off the camera
- 2.Photo button: take photos
- 3.WiFi button: turn on/off camera WiFi
- 4.Video button: Start/stop recording

Note: Remote control is not a standard accessory, need to be purchased separately


After powering on the camera into the preview screen, slide down from the top (Fig 1), click on the remote control icon to select the remote control matching, the camera enters the remote control matching interface (Fig 2), and then press the remote control video button and the photo button at the same time, after the successful matching, the camera will show that the pairing is complete (Fig 3), and then click on the screen of the camera, you can operate the camera through the remote control.

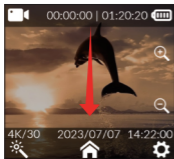

(Fig 1)



 (Fig 2)

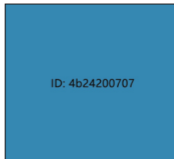

(Fig 3)

App Download



iOS



Android

Scan the QR code on your smart phone or search for "SJCAM ZONE" in the App Store or Google Play to download and install the App.

WiFi connection

- 1 Slide the screen from top to bottom, click the WiFi icon to turn on the camera WiFi, the QR code will be displayed on the camera screen.
- 2 Open the downloaded APP on your phone, click "Connect Camera → Scan Code to Connect", after scanning the QR code on the camera, your phone will enter the APP preview interface (different smart phone systems may have slight differences).
- 3 After successful connection, you can take photos, videos, change settings and other operations in the App page.

Operation Guide

1. Micro SD card installation

Press and hold the button and slide the entire cover down to open the Micro SD card port, insert the card into the slot as shown (pay attention to the direction of the memory card) and gently press inward until you hear a clicking sound.



2. Recording



Power on the camera to enter the recording mode, short press the OK button to record, short press once again to stop.


(The icon turns red during recording and records the duration of the video, the blue light next to the OK button blinks.)




Note: After setting the camera mode, there is a memory function when the camera is turned off and on again, the camera will remember the mode before it is turned off.



3. Photo

 After the camera is turned on, click the icon  at the bottom of the screen or slide the screen (as shown below) to enter the mode interface, slide the screen to the left/right to select the photo icon  to enter the photo mode, and then press the OK button to take photos.

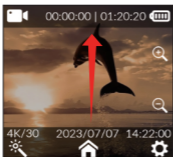


4. Playback

  When the camera is turned on, slide down the screen, click the playback icon  to enter the playback mode, select the video/photo you want to playback, and then press OK to browse.

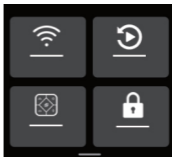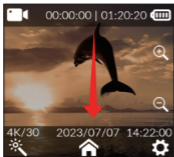


5. Car Mode

After the camera is turned on, click the icon  at the bottom of the screen or slide the screen up to enter the mode interface, slide the screen to the left/right to select the Car Mode icon and click it to enter the Car Mode.

Note: 1. If you need to install the camera upside down when using the car mode, you need to turn on the rotation in the system settings.

 2. After connecting the car power adapter, the camera can automatically turn on and record when you start your car, and will automatically stop recording and turn off the camera after disconnecting the power for about 5 seconds.

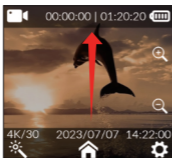


6. Charging

Power adapter or car charger can charge the camera, when charging the device's red light is on, when full the device's red light is off.

Note: Please choose 5V1A, 5V2A output power adapter.

7. Recording Settings

 A. In the video preview interface, click the mode setting icon at the bottom of the screen, slide the screen to select the option you need to set, click to confirm the selection.

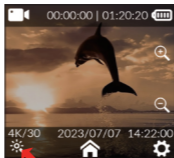

B. Recording Setup Menu

Resolution: 4K (3840*2160) 30fps , 2K (2560*1440) 60/30fps , 1080p (1920*1080) 120/60/30fps , 720p (1280*720) 120/60/30fps

Video Encoding: H.264, H.265

Loop recording: Off/3min/5min/8min

Capture interval: Off/5s/10s/30s/1min

Vertical Screen Mode: Off/On

Motion Detection: Off/On

Pre recording: Off/On

Delay recording: Off/On

Viewing Angle: Wide/Medium/Narrow

WDR: Off/On

HDR: Off/On

Gyro stabilization: Off/On

Sound recording: Off/On

Volume adjustment: 1-8

Date labeling: Off/On

Logo watermark: Off/On

Code Stream: High/Medium/Low

ISO: Auto/100/200/400/800/1600/3200

Sharpness: Strong/Standard/Soft

Saturation: High/Standard/Low

Contrast: High/Standard/Low

Noise Reduction: High/Standard/Low

Image Brightness: High/Standard/Low

White Balance: Auto/Cloudy/Daylight/Tungsten/Fluorescent/Underwater mode

Color: Normal/B&W/Retro/Warm/Cool

 
Exposure compensation: +2.0, +5/3, +4/3, +1.0, +2/3, +1/3, 0.0, -1/3, -2/3, -1.0, -4/3, -5/3, -2.0.

Metering: Average/Center/Spot

Fisheye correction: Off/On

8. Photo settings

A. On the photo preview interface, click the mode setting icon at the bottom of the screen, slide the screen to select the option to be set, and click to confirm the selection.

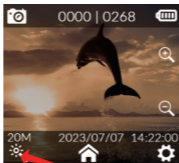

B. Photo setup menu

Photo resolution: 20M (5888*3312) , 16M (5376*3024) , 14M (5008*2816) , 12M (4640*2608) , 10M (4320*2432) , 8M (3840*2160)

Burst mode: Off/3P/5P/10P/30P

Interval shooting: Off/3s/5s/10s/20s/5min/15min/30min

Timelapse photo: Off/3s/5s/10s

Exposure time: Auto, 1/30s, 1s, 2s, 5s, 10s, 20s, 30s

Image Quality: Premium/Standard/Eco

Sharpness: Strong/Normal/Soft

Saturation: High/Normal/Low

Contrast: High/Normal/Low

Noise Cancellation: High/Normal/Low

Image Brightness: High/Normal/Low

White Balance: Auto/Cloudy/Daylight/Tungsten/Fluorescent/Underwater

Color: Normal/B&W/Retro/Warm/Cool

ISO: Auto/100/200/400/800/1600/3200

Exposure compensation: +2.0, +5/3, +4/3, +1.0, +2/3, +1/3, 0.0, -1/3, -2/3, -1.0, -4/3, -5/3, -2.0

Metering mode: Average/Central/Spot


WDR: Off/On

 
HDR: Off/On

Fisheye Correction: Off/On

Date tags: Off/Date/Date & time

9. System settings

A. On the camera preview interface, click the setting icon  in the lower right corner of the screen (as shown in the figure) to enter the setting interface, select the menu to be set by sliding the screen up and down, and click to confirm the selection.

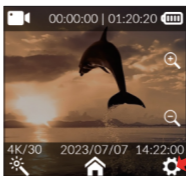

B. System setup menu

Language: English/French/German/Spanish/Italian/Portuguese/Chinese/Japanese/Traditional Chinese/Russian/Romanian/Polish/Czech/Slovak/Hungarian/Finnish/Danish/Dutch/Turkish/Hebrew

Time/Date: H/M/S: YY/MM/DD

Formatting: Yes/No

Quick Recording: Off/On

Quick photo: Off/On

Indicator light: Off/On

Automatic shutdown: Off/3min/5min/10min

Button sound: Off/On

Voice broadcast: Off/On

LED brightness: Low -> high

Screen saver: 30s/1min/3min/5min/Off

Light source frequency: 50Hz/60Hz

Rotation: Off/On

WiFi band: 2.4G/5G

Default setting: Restore factory settings

Version: Check the current version

Product features may change with product updates.

If you need after-sales service, please contact SJCAM customer service.

Technical support email: support@sjcam.com

Official SJCAM website: www.sjcam.com

Importer:

Verkkokauppa.com Oyj Tyynenmerenkatu 11 00220 Helsinki

<https://asiakaspalvelu.verkkokauppa.com>



Made by Shenzhen ZhenCheng Technology Co.,Ltd.
3/F Building C, NO.2 Road 1, Shangxue Industrial Area
Bantian, Longgang District, Shenzhen, China

Made in China

