



# Safety Instructions

---


- Read this manual carefully before use, and retain it for future reference.
- This espresso machine is intended for household use only.
- Before using this espresso machine, please read all instructions and any other materials included in the package.
- Check whether the voltage supplied by the wall socket is consistent with the rated voltage marked on the espresso machine before use.
- Do not immerse the power cord, the plug, or the espresso machine in water or other liquid to prevent fire, electric shock, or personal injury.
- When the espresso machine is not in use or before cleaning, unplug the espresso machine.
- Before cleaning the espresso machine or removing or installing parts of the espresso machine, cool off the espresso machine first.
- If the espresso machine is damaged or has errors including wire breakage or plug damage, immediately stop using it and contact the after-sales service team.
- Only use accessories recommended by the manufacturer; failure to do so may result in fire, electric shock, or personal injury.
- Place the espresso machine on a horizontal tabletop. Do not place the power cord at the edge of the tabletop.
- Do not place the espresso machine near heat sources such as cookers and stoves to prevent accidental ignition causing fire.
- When the espresso machine is not in use, disconnect it from power. When disconnecting the power cord, always hold the power plug to unplug it. Do not pull the power cord to prevent electric shock or short-circuit fire.
- Do not use the espresso machine for other purposes.
- When using the espresso machine, ensure that children are kept at a safe distance from it.
- This espresso machine is not intended for use by people with reduced physical, sensory, or mental capabilities, or those who lack experience and knowledge (including children), unless the process is being supervised or instructed by their safety guardians.
- Children aged 8 years and above can use this espresso machine only in a safe way under supervision or instruction, and they must understand the hazards involved. Do not allow children to perform cleaning and user maintenance unless they are over 8 years old and being supervised.
- Please keep the espresso machine and the power cord out of reach of children aged under 8.
- People with weak physical, sensory, or intellectual ability, or lack of experience and knowledge can also use this espresso machine if they have been given supervision or instruction concerning the use of the espresso machine in a safe way and understand the hazards involved.
- Do not allow children to play with the espresso machine as a toy.
- Exercise caution when using the steam function to prevent scalding.
- The surface marked with "High temperature warning" will get hot during use. Do not touch any hot surfaces.
- Do not operate the espresso machine when the water tank lacks water, so as to prevent damage to the heating system.
- Do not remove the portafilter spout when making coffee.
- Do not operate or store the espresso machine in an environment with a temperature below 0°C.

- Do not use the espresso machine outdoors.
- This espresso machine is intended for household use only. Any services other than cleaning should be maintained by an authorized service agent.
  - If the power cord gets damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified personnel to prevent safety hazards.
  - Do not rinse the espresso machine or immerse it in any liquid.
  - The espresso machine is intended for household use and similar purposes.
  - Do not use the espresso machine in a cupboard when making coffee.
  - When the espresso machine prompts for descaling, please perform the descaling operation according to the instructions specified in the user manual.



berylko

# Product Overview

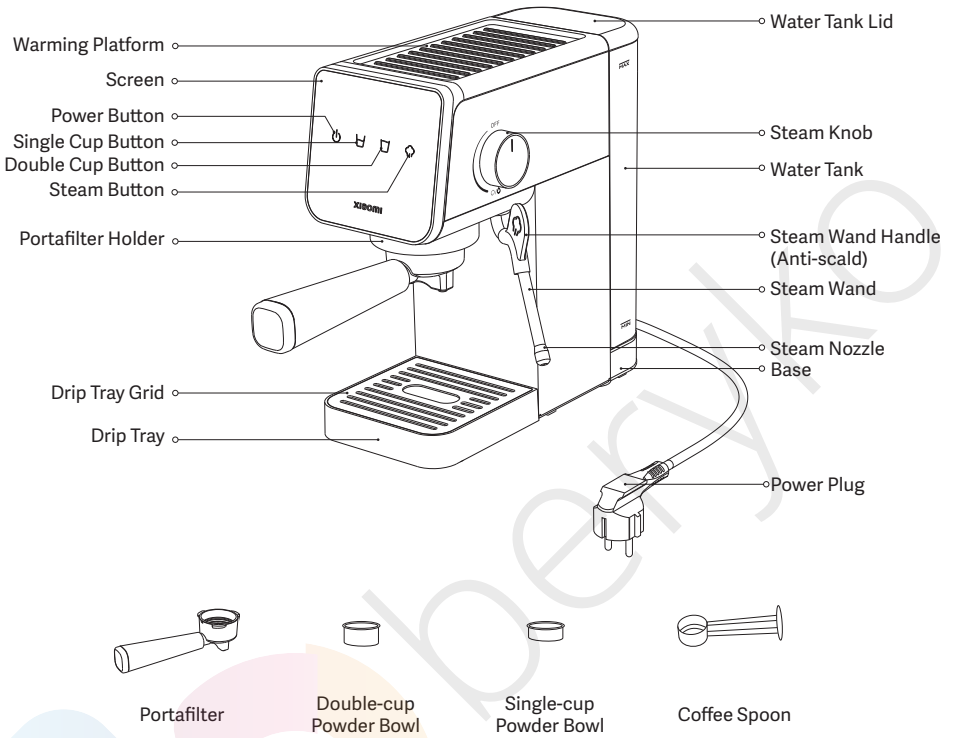

## Notes:


- After unpacking, check whether the appearance of the espresso machine is intact and the accessories are complete.
- Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

# How to Use


## Preparation before Use

• When using the espresso machine for the first time, clean the water tank, portafilter, single-cup powder bowl, and double-cup powder bowl with warm water or detergent, wash them with clean water, and wipe them dry.

1. Remove the silicone protective plug at the bottom of the water tank.

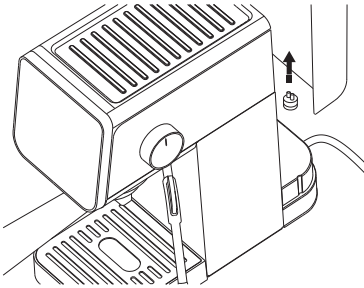


2. Install the drip tray and the drip tray grid onto the espresso machine.

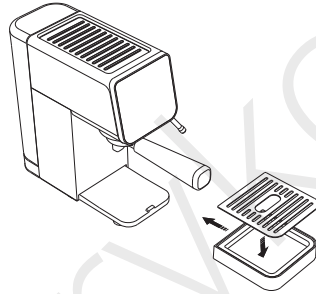


3. Lift up the water tank to take it out, add water to the maximum water level (the mark of MAX), and put the water tank back into the espresso machine.


Note: Push down the water tank with gentle force and make sure it is installed in place.

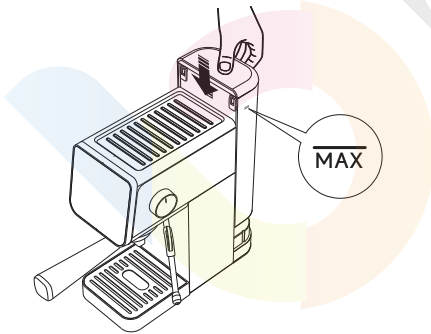

4. Align the handle of the portafilter with the unlocking icon, and install the portafilter onto the espresso machine. Turn the handle of the portafilter counterclockwise to the locking icon.

Note: It may be a little tight when turning the portafilter. This is normal and make sure the portafilter is installed in place.

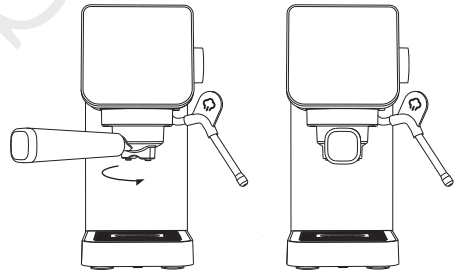



5. Insert the plug into the power socket. The espresso machine gives a beep as a notification sound and  blinks, and then the espresso machine enters the standby mode.

## Turning On/Off

• Press  to turn on or off the espresso machine.

• If no operation is performed for more than 30 minutes, the espresso machine automatically turns off and the power indicator goes off.



• In the standby mode, simultaneously press and hold  and  for 3 seconds to restore factory settings.

## Cleaning the Espresso Machine

When using the espresso machine for the first time, clean it as follows:

1. Place a cup with a volume of at least 355 mL on the drip tray grid.
2. Press the double cup button. It takes some time for water to flow through internal pipes before the espresso machine starts dispensing water from the portafilter. After the water dispensing stops, press the double cup button again. Then, repeat water dispensing at least 3 times to complete cleaning.
3. Pour out residual water from the water tank, and add drinking water into it. The espresso machine will then be ready for use.

Note: If the espresso machine still does not dispense water after multiple attempts, please perform the following operations:

- a. Place the cup below the steam nozzle.
- b. Rotate the steam knob to  / , and wait for hot water to flow out of the steam nozzle. After the hot water flows out for about 5 seconds, rotate the knob to OFF.
- c. After completing the above operations, perform the steps 1–3 again.

## Making Coffee

### 1. Selecting a Powder Bowl

- a. Place the espresso machine on a stable surface, and fill the water tank with purified water.
- b. Select the single-cup powder bowl or the double-cup powder bowl as needed, and place the empty powder bowl into the portafilter.
- c. Use the coffee spoon to add coffee powder to the powder bowl in the portafilter.



Notes:

- The optimal amount of coffee powder for the single-cup powder bowl is about the level of the coffee spoon or 7–9 g, and for the double-cup powder bowl is about the level of two coffee spoons or 14–16 g.
- If the powder bowl is overfilled, the portafilter cannot be fixed into the espresso machine. If the coffee powder is too little, coarse coffee grounds may be formed due to high-velocity water flows, affecting the quality and taste of coffee.
- If the amount of coffee powder is within the optimal range, but the coffee is extracted excessively or insufficiently, please adjust the coarseness of the coffee powder. If the coffee is extracted excessively (flowing out too slowly), coarser coffee powder is required. On the contrary, if the coffee is extracted insufficiently (flowing out too fast), finer coffee powder is required to achieve the optimal effect.

### 2. Pressing Powder

- a. Flatten the coffee powder in the portafilter with the flat end of the coffee spoon, and remove the coffee powder spilling over the portafilter.
- b. Align the handle of the portafilter with the unlocking icon, and install the portafilter onto the espresso machine. Turn the handle of the portafilter counterclockwise to the locking icon. Make sure the portafilter is installed in place.

### 3. Extracting Coffee

- a. Place the coffee cup below the portafilter, and press  or  to extract coffee.
- b. After making coffee, turn the portafilter clockwise to take it out. Pour out the coffee grounds, and then rinse and clean the portafilter and the powder bowl with clean water.




Notes:



- You can try adjusting the default cup volume to achieve a better extraction effect. However, setting the default cup volume will change the taste of coffee and the amount of oil. You can restore the machine to the factory settings if you want to restore it to the default cup volume.

- When adjusting the cup volume, press the button, wait at least 5 seconds after the coffee is dispensed, and then press the button again to confirm the cup volume. If you do not press the button for volume confirmation, the espresso machine will automatically stop after dispensing the coffee for 75 seconds and set the current volume as the default cup volume.
- After making coffee, turn the portafilter clockwise to take it out. Pour out the coffee grounds, and then rinse and clean the portafilter and the powder bowl with clean water.
- To prevent scalding, the powder bowl needs to cool off before you can take it out of the portafilter.

## Frothing Milk

With frothed milk, you can use the extracted coffee to make milk-based coffee such as cappuccino, or latte.

1. Pour fresh milk into a cup. It is recommended to use refrigerated milk at about 5°C.
2. Press , and the indicator blinks. After the steam preheating is completed, the indicator keeps on, and the espresso machine is ready for steaming.
3. Place the steam nozzle below the surface of the milk, and adjust the milk cup for an appropriate tilt angle between the steam nozzle and the surface of the milk, as illustrated.
4. Rotate the steam knob to  /  to discharge steam, and the steam indicator blinks. The impulsive force of the steam will mix air into the milk to produce fine milk foam. When the desired milk foam is reached, rotate the steam knob to OFF, and remove the cup after the steaming process completely stops.
5. Pour the foamed milk into the coffee.

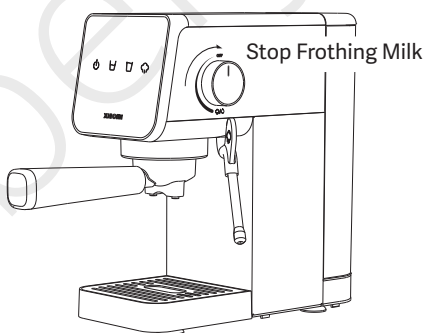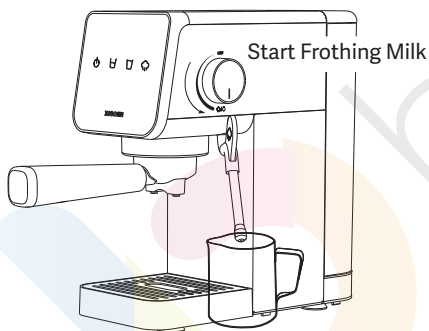

### Notes:

Scald hazard! Do not touch the parts other than the anti-scald handle of the steam wand.

- Repeat steaming 3 to 4 times before frothing the milk to achieve a better performance.
- It is recommended to use refrigerated whole milk to achieve a better foaming effect. After the milk-frothing is completed, gently shake the cup to remove excess foam.
- After each use of the steam nozzle, continue releasing the steam for several seconds to remove the residual milk in the steam nozzle.
- Only clean the steam nozzle after it cools off. Use a clean towel dipped in water to wipe off the residual milk on the steam nozzle.

After the milk-frothing is completed, you must cool off the espresso machine first before making coffee or hot water.

- a. Press ☞ or ☞ button, the corresponding button indicator blinks, and the steam indicator goes off.
- b. Rotate the steam knob to ☞/☞, and the water pump in the espresso machine will pump water for cooling for about 10 seconds.
- c. Wait for all the indicators to light up, and then you can make coffee or hot water.

## Making Hot Water

Before making hot water, make sure the preheating is completed and all four indicators light up.

- Place a cup below the steam nozzle and rotate the steam knob to ☞/☞ to dispense hot water.
- To stop the water dispensing, rotate the steam knob to OFF.
- It can continue to dispense water for about 40 seconds.
- You can prepare a cup of espresso, and pour hot water into the espresso or pour the espresso into hot water to complete an Americano making.

**WARNING: Scald hazard! Do not touch the parts other than the anti-scald handle of the steam wand.**



## Care & Maintenance

---

### Cleaning the Portafilter Holder & Portafilter

- After use for a period of time, some coffee residues may be accumulated inside the portafilter holder. You can use a cleaning brush, sponge, or water to scrub its interior.
- Clean the portafilter and powder bowls with mild detergent and water, and thoroughly clean and air-dry all components.

### Cleaning the Steam Wand & Steam Nozzle

- Rotate the steam nozzle counterclockwise to remove it, and rinse it with tap water. After cleaning is completed, tighten the steam nozzle until it is locked in place.
- Wipe the steam wand with a clean towel.

**WARNING: To prevent scalding, do not clean the steam nozzle or the steam wand until it cools off.**

### Cleaning the Water Tank & Drip Tray

- It is recommended to regularly clean the interior of the water tank with a clean towel.
- Please empty the drip tray promptly.



 
### Cleaning the Espresso Machine

- Do not clean the espresso machine with chemical solvent or abrasive or alcoholic detergent.
- Do not use metal objects for descaling or removing coffee sediment, so as to prevent scratching the metal or plastic surface of the espresso machine.
- If the espresso machine is unused for more than 7 days, it is recommended to run the cleaning program once before reuse.
- Do not clean the espresso machine in water. Use a clean towel dipped in clean water to wipe the surface of the espresso machine.
- Before cleaning the espresso machine, turn it off and disconnect it from power. Do not perform any operations until the espresso machine sufficiently cools down.

### Descaling


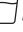 

When the function of making coffee, steaming, and making hot water is cumulatively performed 500 times, the four indicators of the espresso machine will simultaneously blink 5 times to prompt for descaling, and then return to normal. Regular cleaning and maintenance help to prolong the service life of the espresso machine, and reduce the impact of scale accumulation on the espresso machine performance.

It is recommended to use citric acid for descaling. Please perform operations according to the instructions for using citric acid.

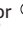1. Fill the water tank with purified water until the maximum water level (MAX), and pour citric acid into the water.
2. Remove the portafilter. Place a cup with a volume of more than 355 mL below each of the portafilter base and the steam nozzle.
3. Press , , or . The water in the water tank flows out of the portafilter and the steam nozzle through pipes to remove the scale accumulated inside. If too much scale is accumulated, more cleaning cycles can be repeated. Fill the water tank with purified water after the cleaning process.

#### Note:

After the descaling is completed, you must manually cancel the descaling prompt. Otherwise, the indicators will blink 5 times as a prompt every time after turning on and preheating.

Simultaneously press and hold , , and  for 3 seconds to cancel the descaling prompt.

# Troubleshooting

| Errors   | Possible Causes  | Solutions  |
|--|--|--|
| 4 indicators blink simultaneously.                                     | The indicators prompt for descaling.   | Simultaneously press and hold ☪, ☒, and ☕ for 3 seconds to cancel the descaling prompt.  |
| The espresso machine cannot make coffee, or the flow rate is too slow. | The heater is overheated.  | Rotate the knob to the maximum position. After the water pump draws water for about 10 seconds to cool the heater, all indicators light up.                  |
|  | The steam knob is not rotated to OFF.  | Rotate the steam knob to OFF position.   |
|  | The water tank is out of water.  | Add pure water to the water tank.  |
|  | Air enters the pipeline and the water flow stops.                                  | Make sure that the water tank has water and is installed in place. Press ☕ to release an appropriate amount of hot water before trying to make coffee again. |
|  | The water tank is not fully installed.   | Push down the water tank to securely install it in place.  |
|  | The powder bowl is clogged.  | Rinse the powder bowl with tap water, and use a brush to clean the holes of the powder bowl.   |
|  | The portafilter holder is clogged with coffee grounds.                             | Clean the portafilter holder.  |
|  | The coffee powder is too fine.   | Try using coarser coffee powder.   |
|  | The coffee powder is pressed too tightly.  | Try changing the density of coffee powder while pressing it.   |
|  | The amount of coffee powder is too large.  | Try reducing the amount of coffee powder in the powder bowl appropriately.   |
| Scale exists in a water pipeline.                                      | Descal first and then try to make coffee again.                                    |  |
| Coffee flows out too fast and tastes weak.                             | The coffee powder is too coarse.   | Try using finer coffee powder.   |
|  | The amount of coffee powder is too small.  | Try increasing the amount of coffee powder in the powder bowl appropriately.   |
| The espresso machine cannot release hot water or steam.                | The hole at the end of the steam nozzle is clogged.                                | Remove the steam nozzle, and use a needle-shaped object to remove any blockages from the hole.   |
| Coffee drips from the edge of the portafilter.                         | The portafilter is not installed correctly.  | Install the portafilter correctly and fix it into the right position.  |
|  | The portafilter is not tightened completely due to excessive coffee powder inside. | Remove the portafilter slowly, and clean the portafilter holder with a clean towel. Reduce the amount of coffee powder when you make coffee again.           |
|  | The coffee powder bowl is clogged.   | Rinse the powder bowl with tap water, and use a brush to clean the holes of the powder bowl.   |

# Specifications

|                           |  |
|---------------------------|--|
| Name                      | Xiaomi Semi-automatic Espresso Machine |
| Model                     | CME003-EU                              |
| Rated Voltage             | 220-240 V                              |
| Rated Frequency           | 50-60 Hz                               |
| Rated Power               | 1350 W                                 |
| Water Tank Capacity       | 0.9 L                                  |
| Appropriate Water Source  | Purified water                         |
| Default Single Cup Volume | 40 mL                                  |
| Default Double Cup Volume | 80 mL                                  |
| Item Dimensions           | 27.5 × 13.7 × 28.4 cm                  |

Note: Due to differences in actual usage environments, the default cup volume may have a slight deviation.

## Regulatory Compliance Information

### Europe-EU declaration of conformity



We, Xiaomi Communications Co., Ltd., hereby declare that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: <http://www.mi.com/global/service/support/declaration.html>

### Europe-EU declaration of conformity



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

Manufacturer: Xiaomi Communications Co., Ltd.  
Address: #019, 9th Floor, Building 6, 33 Xi'erqi Middle Road,  
Haidian District, Beijing, 100085, China  
For further information, please go to [www.mi.com](http://www.mi.com)  
User Manual Version: V1.0



# WARRANTY NOTICE

---

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY HAVE OTHER RIGHTS CONVEYED BY LAWS OF YOUR COUNTRY, PROVINCE OR STATE. INDEED, IN SOME COUNTRIES, PROVINCES OR STATES, CONSUMER LAW MAY IMPOSE A MINIMUM WARRANTY PERIOD. OTHER THAN AS PERMITTED BY LAW, XIAOMI DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE. FOR A FULL UNDERSTANDING OF YOUR RIGHTS WE INVITE YOU TO CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

## 1. LIMITED PRODUCT WARRANTY

XIAOMI warrants that the Products are free from defects in materials and workmanship under normal use and use in accordance with the respective Product user manual, during the Warranty Period.

The duration and conditions related to the legal warranties are provided by respective local laws. For more information about the consumer warranty benefits, please refer to Xiaomi's official website <https://www.mi.com/global/support/warranty>.

Xiaomi warrants to the original purchaser that its Xiaomi Product will be free from defects in materials and workmanship under normal use in the period mentioned above.

Xiaomi does not guarantee that the operation of the Product will be uninterrupted or error free.

Xiaomi is not liable for damages arising from non-compliance with the instructions related to the use of the Product.

## 2. REMEDIES

If a hardware defect is found and a valid claim is received by Xiaomi within the Warranty Period, Xiaomi will either (1) repair the product at no charge, (2) replace the product, or (3) refund the Product, excluding potential shipping costs.

## 3. HOW TO OBTAIN WARRANTY SERVICE

To obtain warranty service, you must deliver the Product, in its original packaging or similar packaging providing an equal degree of Product protection, to the address specified by Xiaomi. Except to the extent prohibited by applicable law, Xiaomi may require you to present proofs or proof of purchase and / or comply with registration requirements before receiving warranty service.

## 4. EXCLUSIONS AND LIMITATIONS

Unless otherwise stipulated by Xiaomi, this Limited Warranty applies only to the Product manufactured by or for Xiaomi and identifiable by the trademarks, trade name or "Xiaomi" or "Mi" logo.

The Limited Warranty does not apply to any (a) Damage due to acts of nature or God, for example, lightning strikes, tornadoes, flood, fire, earthquake or other external causes; (b) Negligence; (c) Commercial use; (d) Alterations or modifications to any part of the Product; (e) Damage caused by use with non-Xiaomi products; (f) Damage caused by accident, abuse or misuse; (g) Damage caused by operating the Product outside the permitted or intended uses described by Xiaomi or with improper voltage or power supply; or (h) Damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Xiaomi.

It is your responsibility to backup any data, software, or other materials you may have stored or preserved on the product. It is likely that the data, software or other materials in the equipment will be lost or reformatted during the service process, Xiaomi is not responsible for such damage or loss.

No Xiaomi reseller, agent, or employee is authorized to make any modification, extension, or addition to this Limited Warranty. If any term is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

Except as prohibited by laws or otherwise promised by Xiaomi, the after-sales services shall be limited to the country or region of the original purchase.

Products which were not duly imported and/or were not duly manufactured by Xiaomi and/or were not duly acquired from Xiaomi or a Xiaomi's official seller are not covered by the present warranties. As per applicable law you may benefit from warranties from the non-official retailer who sold the product. Therefore, Xiaomi invites you to contact the retailer from whom you purchased the product.

The present warranties do not apply in Hong Kong and Taiwan.

## 5. IMPLIED WARRANTIES

Except to the extent prohibited by applicable law, all implied warranties (including warranties of merchantability and fitness for a particular purpose) will have a limited duration up to a maximum duration of this limited warranty. Some jurisdictions do not allow limitations on the duration of an implied warranty, so the above limitation will not be applied in these cases.

## 6. DAMAGE LIMITATION

Except to the extent prohibited by applicable law, Xiaomi shall not be liable for any damages caused by accidents, indirect, special or consequential damages, including but not limited to loss of profits, revenue or data, damages resulting from any breach of express or implied warranty or condition, or under any other legal theory, even if Xiaomi has been informed of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of special, indirect, or consequential damages, so the above limitation or exclusion may not apply to you.

## 7. XIAOMI CONTACTS

For customers, please visit the website: <https://www.mi.com/global/support/warranty>

The contact person for the after-sale service may be any person in Xiaomi's authorized service network, Xiaomi's authorized distributors or the final vendor who sold the products to you. If in doubt please contact the relevant person as Xiaomi may identify.

Importer:  
Beryko s.r.o.  
Pod Vinicemi 931/2, 301 00 Plzeň  
[www.beryko.cz](http://www.beryko.cz)

EU REP.

Xiaomi Technology Netherlands B.V  
Prinses Beatrixlaan 582, 2595BM, The Hague, The Netherlands  
[contact@support.mi.com](mailto:contact@support.mi.com)

