

Warranty Information

This product has a limited 1 year warranty in North America and Australia. For information on warranty periods in other regions, please contact your reseller or SilverStone authorized distributor.
 本产品自购买之日起，于中国地区（不包含澳门，香港特别行政区）享有一年有限质保（部分产品为二年，三年或五年）。详细保固年限请参照官方网站 www.silverstonetek.com.cn 公布之产品型号为依据。

Warranty terms & conditions

- Product component defects or damages resulted from defective production is covered under warranty. Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction.
 - Usage in accordance with instructions provided in this manual, with no misuse, overuse, or other inappropriate actions.
 - Damage not caused by natural disaster (thunder, fire, earthquake, flood, salt, wind, insect, animals, etc...)
 - Product is not disassembled, modified, or fixed. Components not disassembled or replaced.
 - Warranty mark/stickers are not removed or broken.
 Loss or damages resulted from conditions other than ones listed above are not covered under warranty.
- Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other damages or loss associated with the use of product.
- Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for damages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product or incidental or consequential damage whether or not foreseeable and whether or not based on breach of warranty, contract or negligence, even if SilverStone Technology has been advised of the possibility of such damages.
- Warranty covers only the original purchaser through authorized SilverStone distributors and resellers and is not transferable to a second hand purchaser.
- You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eligibility.
- If a problem develops during the warranty period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone <http://www.silverstonetek.com>. Please note that: (i) You must provide proof of original purchase of the product by a dated itemized receipt; (ii) You shall bear the cost of shipping (or otherwise transporting) the product to SilverStone authorized distributors. SilverStone authorized distributors will bear the cost of shipping (or otherwise transporting) the product back to you after completing the warranty service; (iii) Before you send the product, you must be issued a Return Merchandise Authorization ("RMA") number from SilverStone. Updated warranty information will be posted on SilverStone's official website. Please visit <http://www.silverstonetek.com> for the latest updates.

Additional info & contacts

For North America (usasupport@silverstonetek.com)
 SilverStone Technology in North America may repair or replace defective product with refurbished product that is not new but has been functionally tested. Replacement product will be warranted for remainder of the warranty period or thirty days, whichever is longer. All products should be sent back to the place of purchase if it is within 30 days of purchase, after 30 days, customers need to initiate RMA procedure with SilverStone Technology in USA by first downloading the "USA RMA form for end-users" form from the below link and follow its instructions.
<http://silverstonetek.com/contactus.php>

For Australia only (support@silverstonetek.com)
 Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Please refer to above "Warranty terms & conditions" for further warranty details.

SilverStone Technology Co., Ltd. 12F No. 168 Jiankang Rd., Zhonghe Dist., New Taipei City 235 Taiwan R.O.C. + 886-2-8228-1238 (standard international call charges apply)

For Europe (support.eu@silverstonetek.de)
For China (support@silverstonetek.com.cn)
For all other regions (support@silverstonetek.com)

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

有毒有害物质/元素及其化学含量表						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBBs)	多溴二苯醚 (PBDE)
电机组件	X	0	0	0	0	0
金属结构件	0	0	0	0	0	0
塑胶结构件	0	0	0	0	0	0
线缆/连接器	0	0	0	0	0	0
介质/其它	0	0	0	0	0	0
包装材料	0	0	0	0	0	0
辅助材	0	0	0	0	0	0

本表格依据SJ/T 11364的规定编制
 ○：表示该有毒有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。




G11239240



KR03


1. Contents list

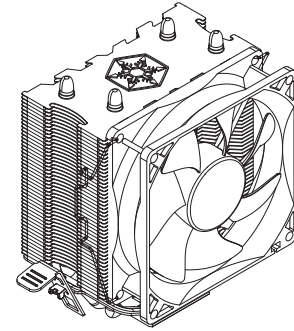

Air cooler (heatsink + fan)




 Thermal Grease




Manual


Manual

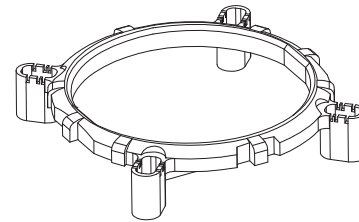


Mounting bracket

 

Thumb screws (black)

 

Standoff screws (transparent)

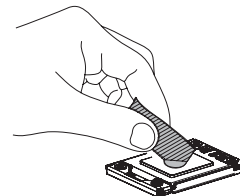


- EN Apply thermal grease evenly on CPU
- DE Tragen Sie Wärmeleitpaste gleichmäßig auf die CPU auf
- FR Appliquez uniformément la graisse thermique sur le CPU
- ES Aplique la pasta térmica de modo uniforme en la CPU
- IT Applicare grasso termico uniformemente sulla CPU
- RU Равномерно нанесите термопасту на центральный процессор
- TH ใช้กาวนำความร้อนและเกลี่ยให้เสมอกับบน CPU
- JP CPUにサーマルグリスを均一に塗ります
- KR CPU 위에 써멀 그리스를 고르게 바릅니다
- CN 在CPU上涂抹薄薄一层导热膏
- TW 在CPU上塗抹薄薄一層導熱膏

Intel


1

LGA 1366 LGA 115X/1200 LGA 775

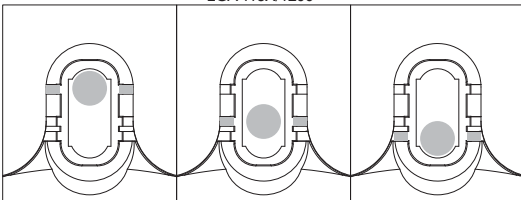


- EN Align mounting bracket to the motherboard according to the socket type
- DE Richten Sie die Montagehalterung entsprechend dem Sockettyp am Motherboard aus
- FR Alignez le support de montage avec la carte mère en fonction du type de socket
- ES Alinee el bracket de montaje con la placa base según el tipo de zócalo
- IT Allineare la staffa di montaggio alla scheda madre in base al tipo di presa
- RU Совместите монтажный кронштейн с материнской платой в соответствии с типом сокета
- TH วางแป้นยึดบนแม่บอร์ดตามประเภทของเต้ารับ
- JP マウントブラケットを、ソケットタイプに従ってマザーボードに合わせます
- KR 소켓 유형에 따라 마더보드에 장착 브라켓을 조정합니다
- CN 依处理器种类，将多合一支架对准主板固定孔
- TW 依處理器種類，將多合一支架對準主板固定孔

2

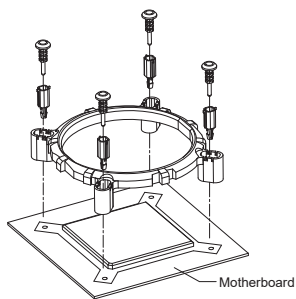


- EN Insert standoff screws into the mounting bracket, then insert thumb screws into the socket
- DE Stecken Sie die Abstandhalterschrauben in die Montagehalterung, setzen Sie dann die Rändelschrauben in den Socket ein
- FR Insérez les vis à entretoise dans le support de montage, puis insérez les vis moletées dans le socket
- ES Inserte los tornillos separadores en el bracket de montaje, luego inserte los tornillos moleteados en el zócalo
- IT Inserire le viti distanziali nella staffa di montaggio, quindi inserire le viti a testa zigrinata nella presa
- RU Вставьте стопорные винты в монтажный кронштейн, затем вставьте винты с накатанной головкой в socket
- TH ใส่สกรูสแตนดาร์ดอ์ฟลงแป้นยึดจากนั้นจึงใส่สกรูหัวมนลงในเต้ารับ
- JP スパースーをマウントブラケットに差し、サムスクリューをソケットに差しします
- KR 장착 브라켓에 스탠드프 스크류를 삽입한 후, 소켓에 덤 스크류를 삽입합니다
- CN 将固定插座插入多合一支架内，再将固定插销插入插座
- TW 將固定插座插入多合一支架內，再將固定插銷插入插座

3

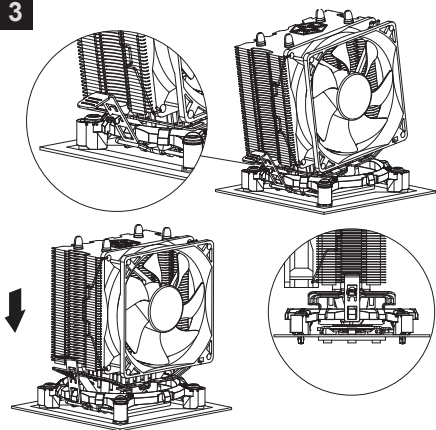

- EN Place KR03 cooler on to the bracket and press on both sides to secure the assembly
- DE Platzieren Sie den Kühler KR03 auf der Halterung und drücken Sie zur Sicherung der Montage auf beide Seiten
- FR Placez le refroidisseur KR03 sur le support et appuyez des deux côtés pour fixer l'assemblage
- ES Coloque el dissipador KR03 en el bracket y presione a ambos lados para fijar el ensamblaje
- IT Collocare il dissipatore di calore KR03 sulla staffa e premere su entrambi i lati per fissare il gruppo
- RU Поместите кулер KR03 на кронштейн и нажмите на обе стороны, чтобы закрепили конструкцию
- TH วางเครื่องทำความเย็น KR03 บนแป้นยึดแล้วกดทั้งสองด้านเพื่อให้ส่วนประกอบยึดกันแน่น
- JP ブラケットにKR03クーラーを置き、両側から押して組み上げりを確認します
- KR 브라켓 위에 KR03 쿨러를 놓고, 고정하기 위해 양쪽 면을 눌러줍니다
- CN 将KR03冷却器放在固定支架中，然后按下将其扣住
- TW 將KR03冷卻器放在固定支架中，然後按下將其扣住



4

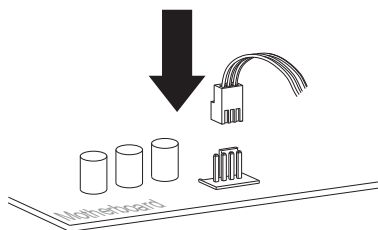


- EN Connect fan connector to the motherboard fan header
- DE Verbinden Sie den Lüfteranschluss mit der Lüfterstiftleiste des Motherboards
- FR Raccordez le connecteur du ventilateur aux bornes ventilateur de la carte mère
- ES Enchufe el conector del ventilador al conector para ventilador de la placa base
- IT Collegare il connettore della ventola al collettore ventola della scheda madre
- RU Подключите коннектор вентилятора к разъёму материнской платы
- TH ต่อขั้วต่อพัดลมกับช่องเสียบพัดลมของแม่บอร์ด
- JP ファンコネクタをマザーボードのファンヘッダに接続します
- KR 마더보드 팬 헤더에 팬 커넥터를 연결합니다
- CN 将风扇电源插上主板风扇插座
- TW 將風扇電源插上主板風扇插座

AMD

1

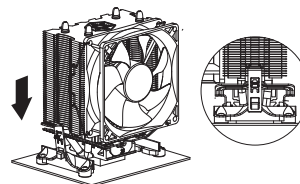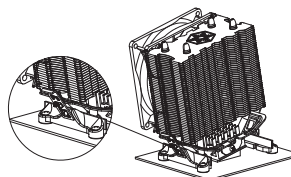

2

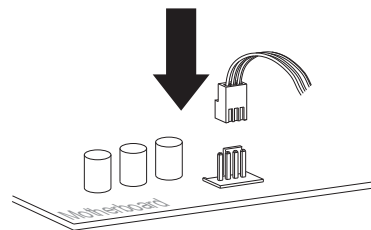

- EN Place KR03 cooler on to the bracket and press on both sides to secure the assembly
- DE Platzieren Sie den Kühler KR03 auf der Halterung und drücken Sie zur Sicherung der Montage auf beide Seiten
- FR Placez le refroidisseur KR03 sur le support et appuyez des deux côtés pour fixer l'assemblage
- ES Coloque el dissipador KR03 en el bracket y presione a ambos lados para fijar el ensamblaje
- IT Collocare il dissipatore di calore KR03 sulla staffa e premere su entrambi i lati per fissare il gruppo
- RU Поместите кулер KR03 на кронштейн и нажмите на обе стороны, чтобы закрепили конструкцию
- TH วางเครื่องทำความเย็น KR03 บนแป้นยึดแล้วกดทั้งสองด้านเพื่อให้ส่วนประกอบยึดกันแน่น
- JP ブラケットにKR03クーラーを置き、両側から押して組み上げりを確認します
- KR 브라켓 위에 KR03 쿨러를 놓고, 고정하기 위해 양쪽 면을 눌러줍니다
- CN 将KR03冷却器放在固定支架中，然后按下将其扣住
- TW 將KR03冷卻器放在固定支架中，然後按下將其扣住

- EN Connect fan connector to the motherboard fan header
- DE Verbinden Sie den Lüfteranschluss mit der Lüfterstiftleiste des Motherboards
- FR Raccordez le connecteur du ventilateur aux bornes ventilateur de la carte mère
- ES Enchufe el conector del ventilador al conector para ventilador de la placa base
- IT Collegare il connettore della ventola al collettore ventola della scheda madre
- RU Подключите коннектор вентилятора к разъёму материнской платы
- TH ต่อขั้วต่อพัดลมกับช่องเสียบพัดลมของแม่บอร์ด
- JP ファンコネクタをマザーボードのファンヘッダに接続します
- KR 마더보드 팬 헤더에 팬 커넥터를 연결합니다
- CN 将风扇电源插上主板风扇插座
- TW 將風扇電源插上主板風扇插座