



Read this manual carefully before use, and retain it for future reference.

# Safety Instructions

---

To reduce the risk of malfunction, electric shock, injury, fire, death, and damage to equipment or property, make sure to observe the following safety precautions.

## Symbol Descriptions

### WARNING

Indicates the potential hazards that may result in serious injuries or death.

### CAUTION

Indicates the risk of minor injuries.



Do not use this device in a bathtub, shower, or water-filled reservoir.

**WARNING**: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

**WARNING**: Do not use this appliance near water.

# WARNING

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- When the hair dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- The hair dryer is for household and indoor use only.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified

# WARNING

---

persons in order to avoid a hazard.

- Do not use the hair dryer if the power cord or power plug is damaged or overheated, as this may cause burns, electric shocks, or cause a fire due to a short circuit.
- Do not touch the power plug or hair dryer with wet hands to avoid electric shocks.
- Do not damage, modify, forcefully bend, pull, twist, or squeeze the power cord, nor place heavy objects on top of it, as this may cause electric shocks, or cause a fire due to a short circuit.
- Fully insert the power plug into a dedicated 220–240 V electrical outlet. Do not use a power strip or extension cord, as this may result in electric shocks or cause a fire due to a short circuit.
- Do not block or insert foreign objects into the air outlet or air inlet, as this may result in burns or electric shocks, or cause a fire due to a short circuit.
- Do not immerse the hair dryer in water.
- Do not use the hair dryer near petroleum gas or other flammable materials (such as volatile agents, paint thinners, sprays) as this may result in an explosion or cause a fire due to a short circuit.
- Do not leave the hair dryer unattended when it is running, as this may result in a fire due to a short circuit.
- Do not store the hair dryer in a highly humid environment, as this may result in electric shocks, or cause a fire due to

# WARNING

---

a short circuit.

- Do not store the hair dryer within the reach of children or infants, as this may result in electric shocks or injury.
- Do not repair, disassemble, or modify the hair dryer yourself to prevent injury due to fire or improper operation. If repairs are needed, please contact the after-sales service team.

# CAUTION

---

- In the event of a malfunction or breakdown, such as no air flow, frequent stopping, internal overheating, or smoking, please immediately stop using the hair dryer and unplug it from the power, then contact the after-sales service team. Continuing to use the hair dryer in these circumstances may result in electric shocks or injury, or cause a fire due to a short circuit.
- Avoid dropping the hair dryer or subjecting it to strong impacts, as this may result in electric shocks, or cause a fire due to a short circuit.
- Keep hair at least 10 cm away from the hair dryer's air inlet when in use to prevent hair from getting caught in the air inlet and causing injury.
- Do not use the hair dryer on infants or young children, as it may cause burns.
- Do not use the hair dryer for purposes other than drying hair, such as drying clothes or other items.

# EU Declaration of Conformity

---



We, Hangzhou Lexiu Electronic Technology Co., Ltd., hereby, declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: <http://www.mi.com/global/service/support/declaration.html>

 
## WEEE Disposal and Recycling Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

# Product Overview

Note: Illustrations of product and accessories in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

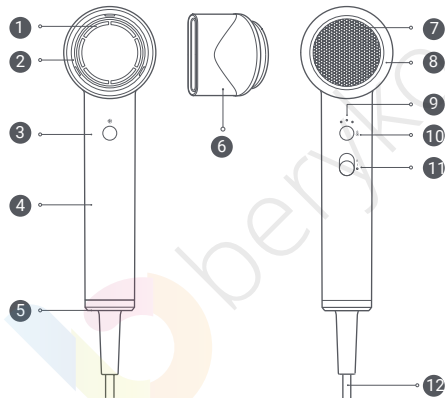

- 1 Air Outlet
- 2 Air Nozzle Connector
- 3 Cool Shot Button
- 4 Handle
- 5 Heat Dissipation Vent
- 6 Air Nozzle

- 7 Air Inlet
- 8 Airflow Filter (Detachable)
- 9 Temperature Indicators
- 10 Temperature Button
- 11 On/Off/Speed Button
- 12 Power Cord


# How to Use

 ---

## Installing the air nozzle

- To install the air nozzle, line up the air nozzle with the air nozzle connector and insert it. The air nozzle can be rotated 360° for ease of use.

**CAUTION:** Turn off the hair dryer before installing the air nozzle. To avoid burns, do not adjust or remove the air nozzle during use.

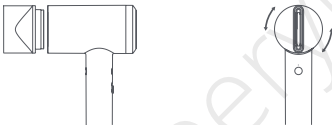

## Turning on/off and changing the speed

- Make sure the on/off/speed button is set to the off [0] position, then insert the power plug into an electrical outlet and push the button to the [I] position to turn on the hair dryer at low speed. Continue pushing the button to the [II] position to switch the hair dryer to high speed.
- Push the on/off/speed button down to the [O] position to turn off the hair dryer.



Off



Low Speed



High Speed

# How to Use

---

## Changing the temperature

- Press the temperature button to cycle through modes of cool air, low heat, medium heat, and high heat.

Cool air    ◦◦◦

(All temperature indicators off)

Low heat    ●◦◦

 
(1 temperature indicator on)

Medium heat    ●●◦

(2 temperature indicators on)

High heat    ●●●

(3 temperature indicators on)

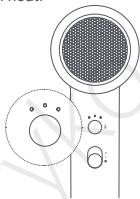

## Cool shot button

- Press and hold the cool shot button when the hair dryer is running to immediately switch to the cool air mode, and release the button to return to the temperature mode used previously.

## Notes:

- Please unplug the hair dryer promptly after use.
- The next time the hair dryer is turned on, it will default to the last temperature mode used before being turned off.

 
# Care & Maintenance

---


**WARNING:** Always turn off the hair dryer by using the on/off button and unplug it from the power before cleaning or maintaining it.

## Cleaning the airflow filter


1. Turn the airflow filter counterclockwise until "●" is aligned with "⌚" to remove it.



 2. Once the airflow filter is removed, use a lint-free cloth or soft brush to clean any dust or impurities from the airflow filter.

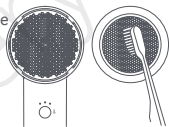

 3. After finishing cleaning, align the "●" on the airflow filter with the "⌚" on the hair dryer, and then turn the airflow filter clockwise until "●" is aligned with "⌚" to secure it into place.



## Care & Maintenance

---

Cleaning the heat dissipation vent, air outlet and main body

Use a lint-free cloth, cotton swab or soft brush to clean any dust and impurities from the heat dissipation vent and air outlet. Use a dry, soft cloth to wipe the main body of the hair dryer.



### Notes:

- Please clean the hair dryer regularly to prevent debris from building up.
- When cleaning, do not rinse the airflow filter or heat dissipation vent with water, as this may cause malfunctions of the hair dryer.
- Do not press or rub the air inlet and outlet with fingernails or sharp objects when cleaning to avoid damage to the hair dryer.
- Do not use alcohol, nail polish remover or detergent to clean the hair dryer, as this may cause malfunctions, cracking, or discoloration of the hair dryer.

# Troubleshooting

Errors	Possible Causes	Solutions
The hair dryer isn't working.	It's not turned on.	Push the on/off button to turn it on.
	The power plug isn't inserted in or has a poor contact.	Check whether the power plug is fully inserted.
	The internal wiring is damaged.	Contact the after-sales service team.
The speed setting cannot be adjusted.	The internal wiring is damaged.	Contact the after-sales service team.
The temperature setting cannot be adjusted.		
The cool shot button isn't working.		
The temperature indicators don't light up when the hair dryer is running in hot air mode.		
There is a burning smell during use.	The air inlet or outlet is blocked.	Turn off the hair dryer and disconnect it from the power, then clean the airflow filter and air outlet.
	An internal component is damaged.	Contact the after-sales service team.
The hair dryer emits no air or hardly any air.	The air inlet or heat dissipation vent is blocked.	After turning off the hair dryer and unplugging it from the power, clean the air inlet and heat dissipation vent. Leave it for 10 minutes before using it again. If the hair dryer still isn't working normally, contact the after-sales service team.
The hair dryer itself or the hot air is abnormally hot.		
The temperature indicators blink when the hair dryer is turned on.		
	The hair dryer enters into the motor fault protection state.	

# Specifications

Name	Hair Dryer
Model	GSHGL01LX
Rated Voltage	220–240 V~
Rated Frequency	50–60 Hz
Rated Power	1600 W
Item Dimensions	128.6 × 70 × 231 mm (excluding air nozzle)
Production Date:	See box

Manufactured for: Xiaomi Communications Co., Ltd.

Manufactured by: Hangzhou Lexiu Electronic Technology Co., Ltd.  
(a Mi Ecosystem company)

Address: 2006–2010, Building 1, 501, 2nd Baiyang Street, Qiantang New  
District, Hangzhou, 310018 Zhejiang, China

For further information, please go to [www.mi.com](http://www.mi.com)

For detailed e-manual, please go to [www.mi.com/global/support/user-guide](http://www.mi.com/global/support/user-guide)

Made in China

User Manual Version: V1.0

Importer:

Beryko s.r.o.

Pod Vinicemi 931/2, 301 00 Plzeň

[www.beryko.cz](http://www.beryko.cz)

berylko

